

## KEMPEROL® Roofpatch – keep one handy at all times

The ready-to-use KEMPEROL® 1K-SF Roofpatch may be applied directly to damaged areas.

The reinforcement fleece has already been soaked in solvent-free KEMPEROL® 1K-SF.

No buckets, no mixing, no left-overs.

Great for covering cracks. Naturally solvent-free.

**No priming required on standard bitumen sheets, PVC roof sheets, concrete, wood, screed, resin-modified screed and metals.**

### Fast. Reliable. Leak-proof.

- ✓ Fast emergency repairs
- ✓ No odours
- ✓ No priming
- ✓ No solvents
- ✓ Immediately at hand
- ✓ Ready-to-use
- ✓ Easy-to-use
- ✓ No additional tools
- ✓ Clean application
- ✓ No left-over material
- ✓ Tried-and-tested KEMPEROL® quality



More information and application examples are available at:  
[www.kemperol-roofpatch.com](http://www.kemperol-roofpatch.com)

KEMPER SYSTEM GmbH & Co. KG  
Holländische Straße 32 – 36 • D-34246 Vellmar  
Phone +49 561 8295-0 • Fax +49 561 8295-10  
E-Mail: [post@kemper-system.com](mailto:post@kemper-system.com)  
[www.kemperol.com](http://www.kemperol.com)

Certified to DIN EN ISO 9001:2008 and DIN EN ISO 14001

IBG  
GROUP E 68 - 2012-05

**NEW**

# The KEMPEROL®

## Roofpatch – the quick emergency solution for stopping leaks



- ✓ No priming
- ✓ No odours
- ✓ No solvents
- ✓ KEMPEROL® quality

 **KEMPER**  
SYSTEM




## Put a patch on it!

KEMPER SYSTEM has developed a roof patch as a quick emergency solution for repairing leaks. The ready-to-use KEMPEROL® Roofpatch may be applied directly to leaking and damaged areas to effect reliable repairs. Rapid sealing in tried-and-tested KEMPEROL® quality for cracks in bitumen sheets, PVC roofing sheets, concrete, wood, screed and metal.


### Step-by-step instructions:



Carefully clean the dry surface to be patched, e. g. bitumen or PVC roof sheeting. Take out and put on the gloves.

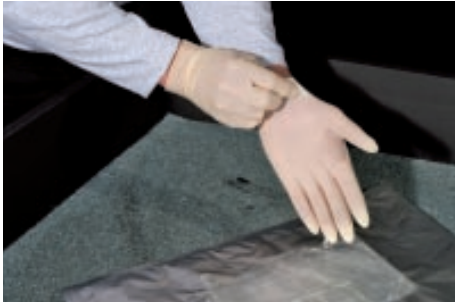

Use the side of your hand to evenly distribute the material within the aluminium bag. Tear open the bag with the help of the

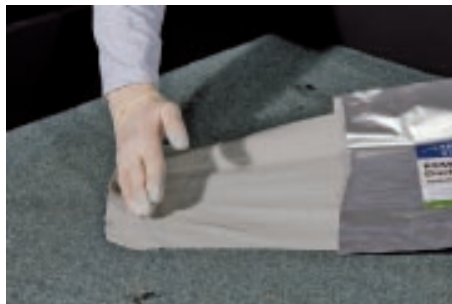

tear aid. Carefully pull out the KEMPEROL® 1K-SF Roofpatch. Apply to the area to be repaired, hold tight with one hand and pull the whole roof patch out of the aluminium bag. Smooth the roof patch with your hands to remove air bubbles and creases. That's it. The surface is rainproof in around 60 minutes.